

FQ777®

14+
AGES



SPIDER DRONE 126C

HEXACOPTER

With HD Camera



FQ777[®]

SPIDER DRONE 126C HEXACOPTER



SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



BLACK

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777[®]




RED

FQ777®



BLACK

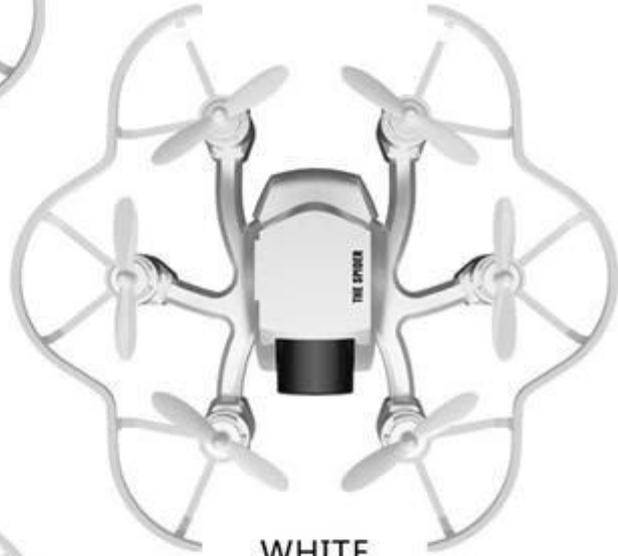

WHITE



RED

SPIDER
DRONE 126C
HEXACOPTER

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



BLACK

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



WHITE

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



RED

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777®



HD CAMERA ANGLE,
LET'S SHOW VISUAL EFFECT
BROADER AND CLEARER!



SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FO777[®]



BACK

SPIDER DRONE 126C

HEXACOPTER
With HD Camera

FQ777®



HEXACOPTER SIZE:108X98X25mm



BOX SIZE:188X117X52mm


SPIDER DRONE 126C

HEXACOPTER


With HD Camera

FQ777®

MODE 1

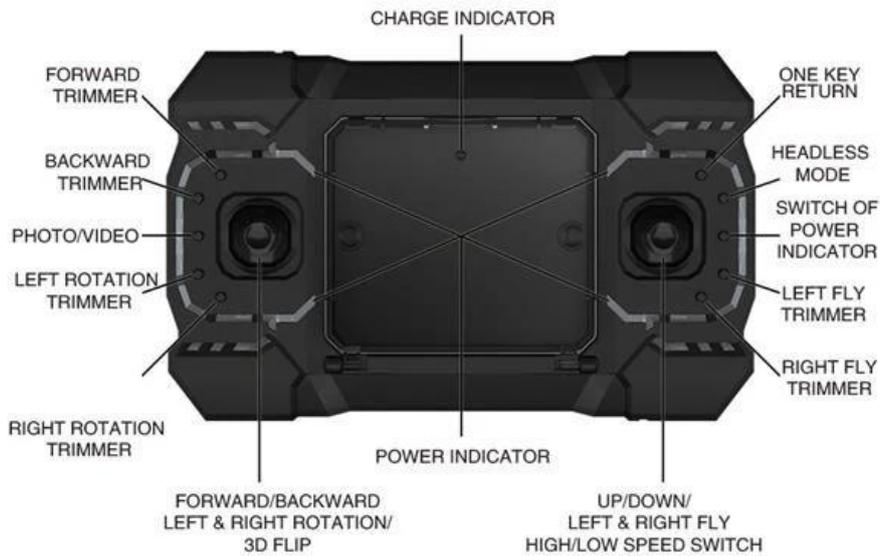

MODE 2

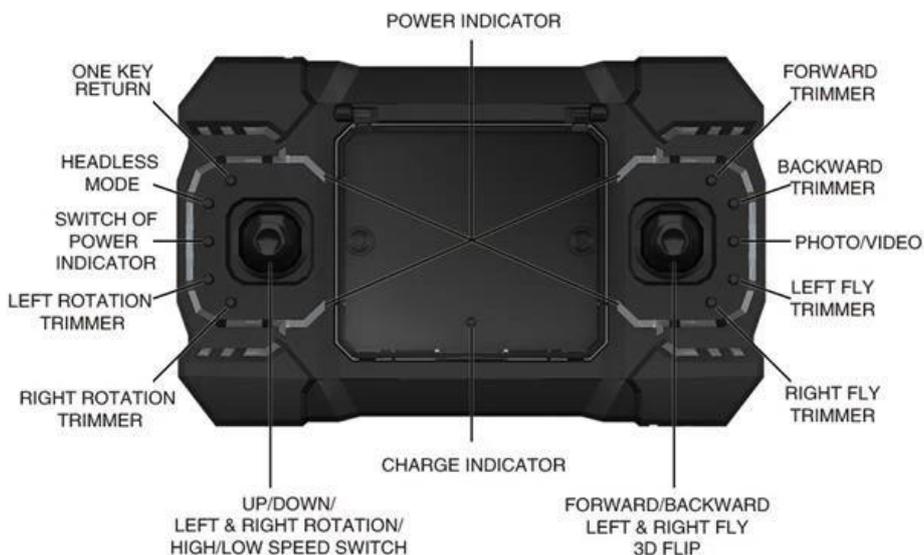

SPIDER DRONE 126C

HEXACOPTER
With HD Camera

FQ777®



The RC Transmitter Default mode 2

MODE 1 / MODE 2 SWITCH



YOU CAN PRESS DOWN THE ACCELERATOR KEY
AT THE SAME TIME OPER THE BACK OF THE TRANSMITTER
MODE 1/2 SWITCH INTO THE MODE 1

SPIDER DRONE 126C

HEXACOPTER

With HD Camera

FQ777[®]



Headless mode calibration



Gyroscope calibration

Press down it
switching speed



Press down it
360°rolling action