

Höhepunkte

- 1) Betriebs-System: Fahren sie mit iPad®, iPhone® oder iPod touch®-Gerät oder mit Android™ Smartphones und Tablets
- 2) Siehe in der Dunkelheit mit Rover eingebauten Nachtsicht
- 3) Stream und Aufzeichnen von Live-Videos und Fotos
- 4) Videos und Fotos auf Facebook, YouTube und Twitter Sites Laden von Smartphones und Tabellen
- 5) Kontrollieren Sie den Winkel von der Videokamera fern
- 6) Das Weitwinkelobjektiv erfasst mehr von seiner Umgebung
- 7) Wifi: b / g
- 8) Built-in LED-Anzeige (Geben Sie den Ladezustand & Bewegungszustand)
- 9) Wireless-Reichweite von bis zu 100 ft ungehinderten.: 50 ft rund um Wände und in andere Räume.
- 10) Free App aus dem iTunes App Store und Google Play
- 11) Indoor Batterie: 3,7 V 3000mAh Li-Poly
- 12) Spieldauer: 240 Minuten Stand-by (Verbunden), Operation 90 Minuten (Nehmen Sie Fotos, Videos & Runing)

Technische Daten

Auto-Größe: 18x18x11cm

Paket Dimension: 32.5x25x13.5cm

Verpackung: 6pcs

Meas: 52.5x34.5x43.5cm

Car Gewicht: 700g

Batterie: 3,7 V 3000mAh Li-Poly

Regelbereich: 10-30m

Geeignet für alle iPhone, iPad und iPod Touch-Modelle

Bis zu 8 Stunden Standby-Zeit.



CLOUD ROVER

- WIFI CONNECTED VEHICLE
- 50 FEET AROUND THE WALL AND 100 FEET OPEN SPACE
- 2.4GHZ IEEE 802B/G WIRELESS TECHNOLOGY
- HIGH IMAGE&VIDEO QUALITY 640*480SCREENRESOLUTION
- RECORD LIVE VIDEO AND STILLS ON YOUR SMART DEVICE OR COMPUTER
- CAMERA MANUAL ADJUSTABLE TO TAKE LIVE VIDEO AND STILL
- CAMERA ANGLE ADJUST TABLE FROM 0 TO 40 DRGREE
- BUILT-IN HIGH CAPACITY RECHARGABLE3.7 VOL TS/600 MAH LI-PO BATTERY
- LIVE VIEW UP TO 2 HOURS
- VEHICLE OPERATES UP TO 0.5 HOURS
- BUILT-IN NIGHT VISION
- BUILT-IN LED LIGHTS
- EXCELLENT CLIMBING ANGLE
- OVER 30 DEGREE

Support :    



CLOUD ROVER

 




 


Operation step

1. go App store
2. search "i-spy toys" download & install - free!
3. Turn on the product
4. go to setting and turn on wi-fi
5. select the SSID address of your tank
6. go to the control interface
7. start game

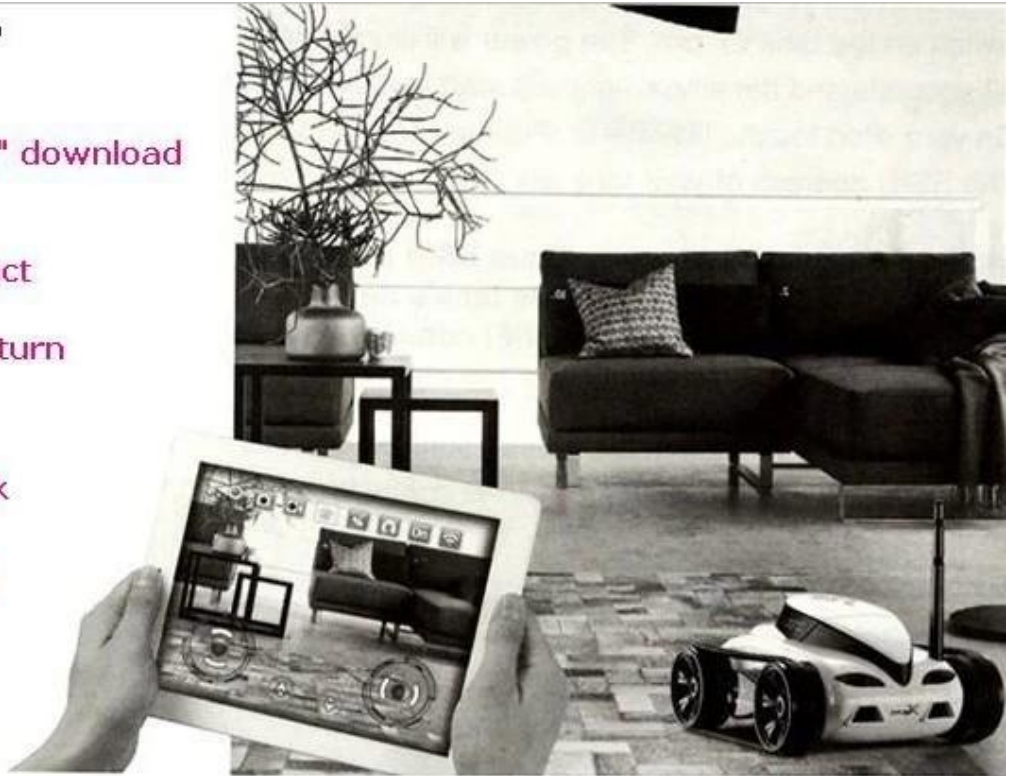

● Name of the function key

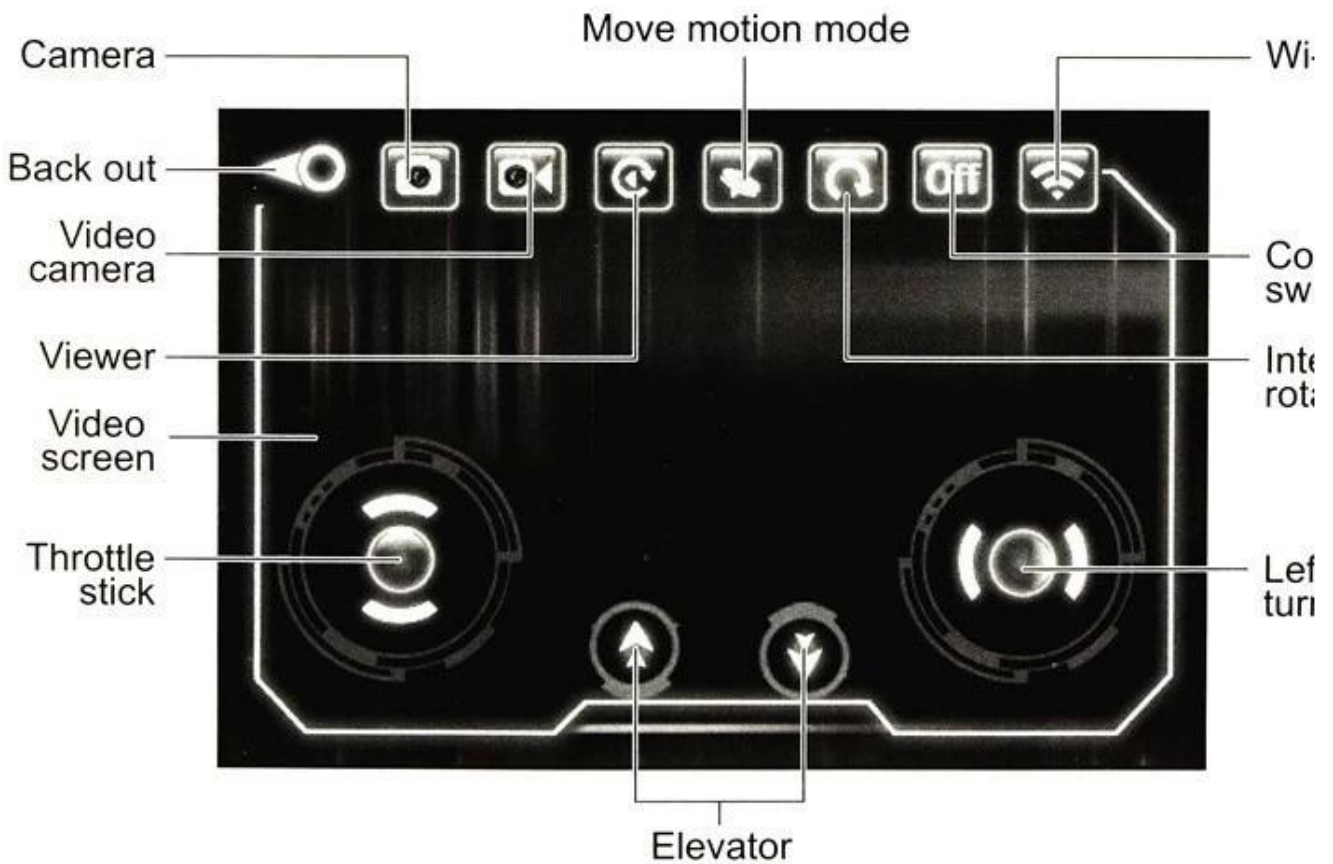

CHARGING



CAUTION:

Do not remove the indoor battery out of the Cloud Rover™ Vehicle.

Notes:

Each Cloud Rover™ vehicle has an unique SSID address (stick on the underside of each vehicle). If there are multiple vehicle's being used, the individual SSID address will appear as Wi-Fi connection on your device, select your vehicle's SSID address.

HOW TO CONNECT THE WI-FI

1. Please check up the SSID number on the bottom of the vehicle. Move the power switch on the vehicle to "ON" position. The power will illuminate, Wait approximately 60 seconds and the signal light will start to blink slowly.
2. On your iOS, Android and PC system device, go to settings and turn on the Wi-Fi. The SSID address of your vehicle will appear as an available connection.
3. Select the vehicle to confirm the connection. Ensure there is a check mark to the left of the SSID address and the Wi-Fi connection logo appears at the top of your device's screen.
4. Exit out of setting and open the "Cloud Rover™".
 1. Turn the vehicle power switch on "OFF" or "ON" Position.
 2. The tail light will be red flashing when charging.
 3. When the charging completely finished, All the tail flash light will be light up in red.

Remark: The Charging time will be shorted in half when the power switch is on "OFF" state.
5. The signal light will blink faster now.
6. When your device screen shows the view from the vehicle's live-stream video camera. You are ready to start exploring.



Charging And Running Led Indicator



PACK LIST

Go to Official website www.icloudrover.com

Click, download & install the software Free !

Turn on the Vehicle

Go to setting and turn on smart phone wifi

Select the SSID address of your vehicle

Go to the control interface → Star your Games !

PACK LIST

Contents:

1 PC x Cloud Rover™ vehicle

1 PC x Antenna

1 PC x AC Charger

1 PC x Instruction Manual

WARNING:

1. Please Charge the Cloud Rover™ about 2.5 hours before playing. All the tail flash light will be light up in red after full charged.
2. Smart phone power less than 40%, Signal will become weak.