

□□□□

- 1) 材質：iPad®, 鋼殼 鋼 鋼 鋼 ® 鋼, 鋼 鋼鋼鋼™ 鋼 鋼 鋼鋼鋼 鋼鋼
- 2) 鋼 鋼 鋼 鋼鋼 鋼鋼 鋼鋼 鋼鋼
- 3) 鋼 鋼 鋼 鋼 鋼 鋼
- 4) 鋼 鋼 鋼鋼 鋼 鋼, 鋼鋼 鋼鋼 鋼鋼 鋼鋼 鋼 鋼鋼 鋼
- 5) 鋼 鋼鋼 鋼鋼 鋼鋼 鋼
- 6) 鋼 鋼 鋼鋼 鋼鋼 鋼 鋼
- 7) 鋼鋼 : B / G
- 8) 鋼 LED 鋼 鋼 (鋼 鋼 鋼 鋼鋼鋼)
- 9) 鋼 100 鋼鋼 鋼鋼 鋼鋼 : 50鋼鋼 鋼 鋼鋼 鋼鋼 鋼 鋼鋼.
- 10) iTunes® 鋼 鋼鋼鋼 鋼 鋼鋼鋼鋼 鋼 鋼
- 11) 鋼 鋼鋼 : 3.7V 3000Mah 鋼 鋼
- 12) 鋼 鋼 : (2040鋼 (鋼), 90 鋼 鋼 鋼鋼 鋼, 鋼鋼 & A鋼 鋼;鋼鋼鋼)鋼

□□□

鋼鋼 鋼 : 18x18x11cm  
 鋼鋼 鋼 : 32.5x25x13.5cm  
 鋼 : 6PCS  
 MEAS : 52.5x34.5x43.5cm  
 鋼鋼 鋼 : 700g  
 鋼鋼 : 3.7V 3000mAh 鋼 鋼  
 鋼 鋼 : 10-30M  
 鋼 鋼鋼, 鋼 鋼 鋼 鋼鋼 鋼 鋼鋼 鋼  
 鋼 鋼 鋼 8 鋼.

**CLOUD ROVER**

- WIFI CONNECTED VEHICLE
- 30 FEET AROUND THE WALL AND 100 FEET OPEN SPACE
- 2.4GHZ IEEE 802B/G WIRELESS TECHNOLOGY
- HIGH IMAGE&VIDEO QUALITY 640\*480SCREENRESOLUTION
- RECORD LIVE VIDEO AND STILLS ON YOUR SMART DEVICE OR COMPUTER
- CAMERA MANUAL ADJUSTABLE TO TAKE LIVE VIDEO AND STILL'S
- CAMERA ANGLE ADJUST TABLE FROM 0 TO 40 DRGREE
- BUILT-IN HIGH CAPACITY RECHARGABLE3.7 VOL TS/600 MAH LI-PO BATTERY
- LIVE VIEW UP TO 2 HOURS
- VEHICLE OPERATES UP TO 0.5 HOURS
- BUILT-IN NIGHT VISION
- BUILT-IN LED LIGHTS
- EXCELLENT CLIMBING ANGLE
- OVER 30 DEGREE

Support :



# CLOUD ROVER









## Operation step

1. go App store
2. search "i-spy toys" download & install - free!
3. Turn on the product
4. go to setting and turn on wi-fi
5. select the SSID address of your tank
6. go to the control interface
7. start game

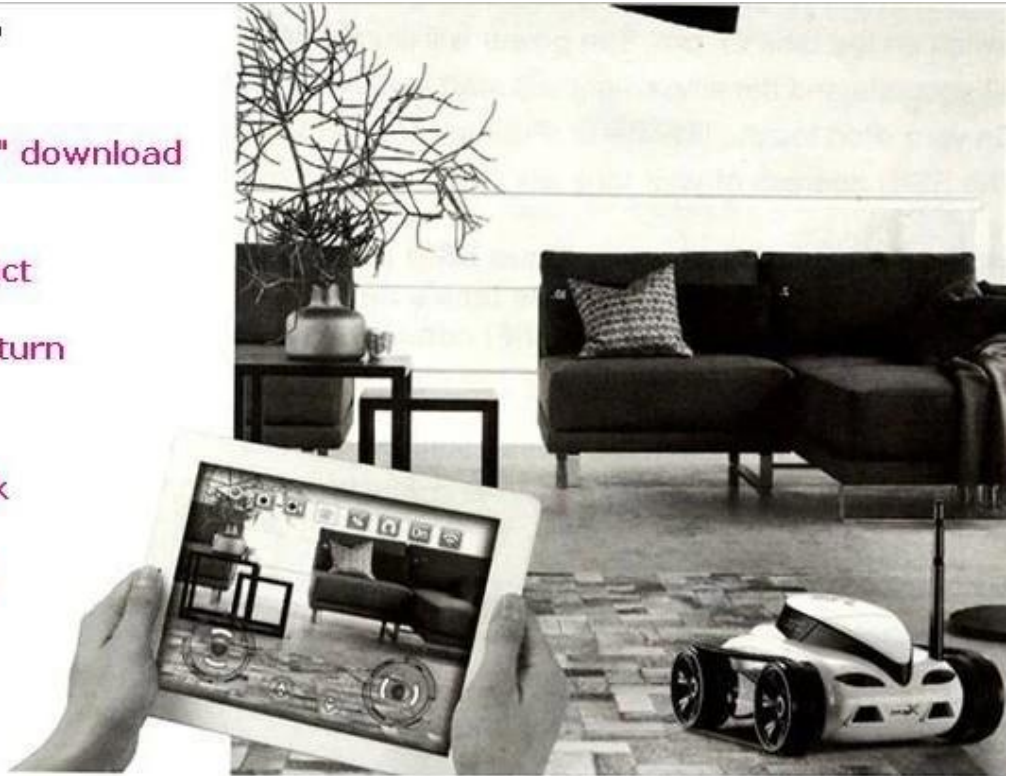

## ● Name of the function key

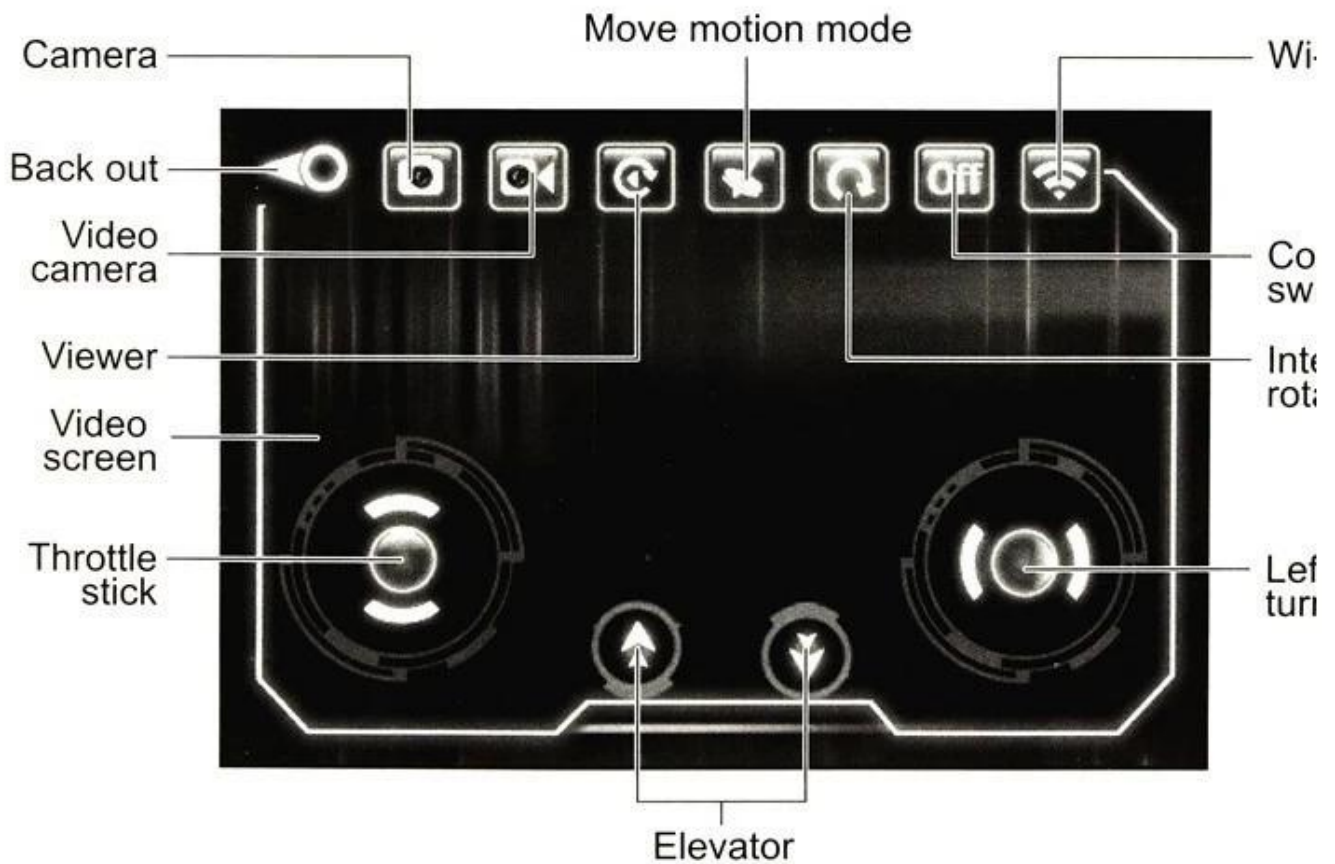

## CHARGING



### CAUTION:

Do not remove the indoor battery out of the Cloud Rover™ Vehicle.

### Notes:

Each Cloud Rover™ vehicle has an unique SSID address ( stick on the underside of each vehicle). If there are multiple vehicle's being used, the individual SSID address will appear as Wi-Fi connection on your device, select your vehicle's SSID address.

## HOW TO CONNECT THE WI-FI

1. Please check up the SSID number on the bottom of the vehicle. Move the power switch on the vehicle to "ON" position. The power will illuminate, Wait approximately 60 seconds and the signal light will start to blink slowly.
2. On your iOS, Android and PC system device, go to settings and turn on the Wi-Fi. The SSID address of your vehicle will appear as an available connection.
3. Select the vehicle to confirm the connection. Ensure there is a check mark to the left of the SSID address and the Wi-Fi connection logo appears at the top of your device's screen.
4. Exit out of setting and open the "Cloud Rover™".
  1. Turn the vehicle power switch on "OFF" or "ON" Position.
  2. The tail light will be red flashing when charging.
  3. When the charging completely finished, All the tail flash light will be light up in red.

Remark: The Charging time will be shorted in half when the power switch is on "OFF" state.
5. The signal light will blink faster now.
6. When your device screen shows the view from the vehicle's live-stream video camera. You are ready to start exploring.



Charging And Running Led Indicator



### PACK LIST

Go to Official website [www.icloudrover.com](http://www.icloudrover.com)

Click, download & install the software Free !

Turn on the Vehicle

Go to setting and turn on smart phone wifi

Select the SSID address of your vehicle

Go to the control interface → Start your Games !

### PACK LIST

Contents:

1 PC x Cloud Rover™ vehicle

1 PC x Antenna

1 PC x AC Charger

1 PC x Instruction Manual

#### **WARNING:**

1. Please Charge the Cloud Rover™ about 2.5 hours before playing. All the tail flash light will be light up in red after full charged.
2. Smart phone power less than 40%, Signal will become weak.