Points forts

1) Système d'exploitation: Conduisez avec votre iPad®, iPhone® ou iPod de l'appareil, ou avec des téléphones Android ™ intelligents et les tablettes
2) Voir dans l'obscurité en utilisant la vision de nuit intégré de Rover
3) Stream et enregistrer de la vidéo en direct et les images fixes
4) Mettez des vidéos et des photos sur les sites Facebook, YouTube et Twitter par les téléphones intelligents et les tables
5) Contrôler l'angle de la caméra vidéo à distance
6) Son objectif grand-angle capte plus de ses environs
7) Wifi: b / g
8) intégré dans l'indicateur LED (indiquer à l'État de charge & amp; Etat mouvement)
9) Portée sans fil jusqu'à 100 ft dégagée:. 50 pieds autour des murs et dans d'autres pièces.
10) Free App de l'iTunes® App Store et Google Play
11) Batterie intérieure: 3.7V 3000mAh Li-poly
12) Durée de jeu: Stand by 240 minutes (relié), l'opération de 90 minutes (prendre des photos, vidéo & amp; Running)

Caractéristiques

Taille du véhicule: 18x18x11cm
Dimension de l'emballage: 32.5x25x13.5cm
Emballage: 6pcs
Meas: 52.5x34.5x43.5cm
Car Poids: 700g
Batterie: 3000mAh 3.7V Li-Poly
Plage de contrôle: 10-30m
Convient pour tous les modèles d'iPhone, iPad et iPod
Jusqu'à 8 heures d'autonomie en veille.

Cloudrover

CLOUD ROVER

CLOUD ROVER™

Operation step

1. go App store

2. search"i-spy toys" download & install - free!

3. Turn on the product

4. go to setting and turn on wi-fi

5. select the SSID address of your tank

6. go to the control interface

7. start game

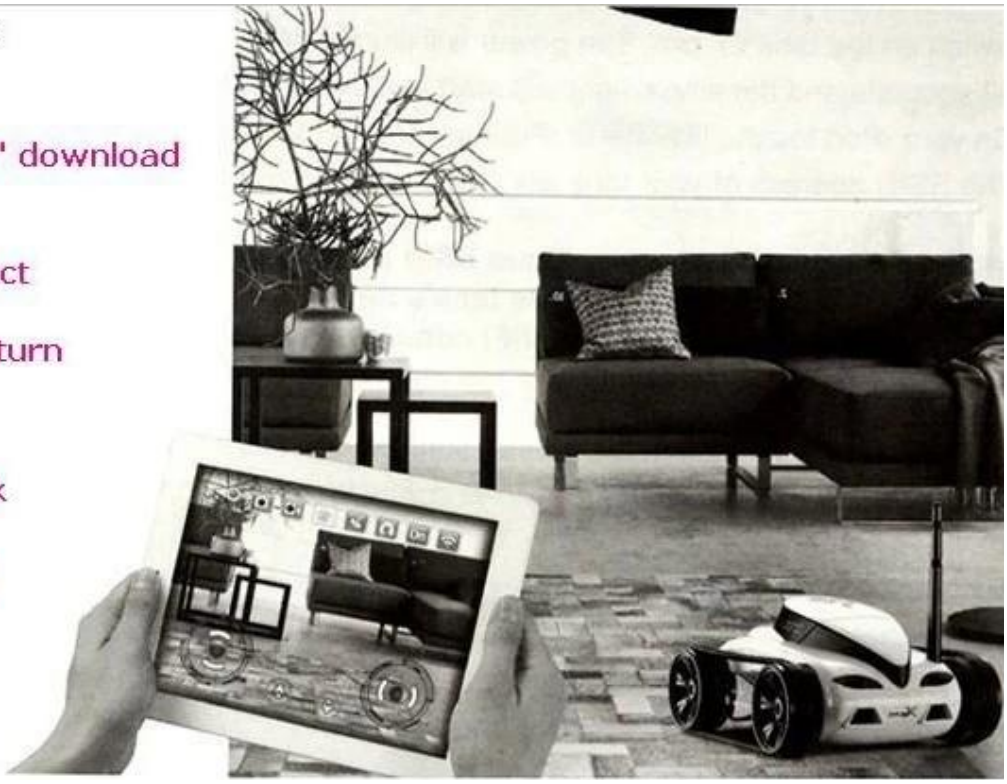

Name of the funtion key

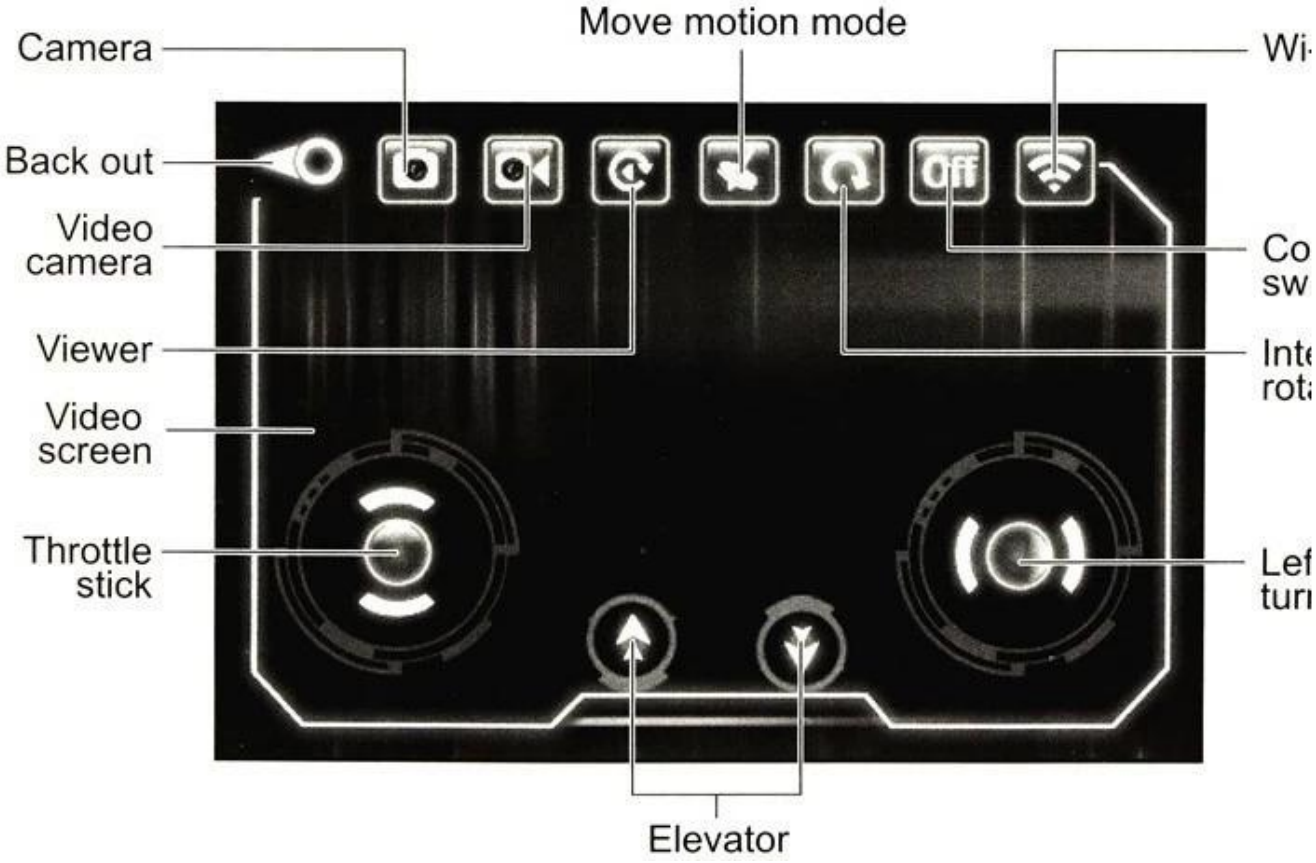

CHARGING

⚠ CAUTION:

Do not remove the indoor battery out of the Cloud Rover™ Vehicle.

Notes:

Each Cloud Rover™ vehicle has an unique SSID address (stick on the underside of each vehicle). If there are multiple vehicle's being used, the individual SSID address will appear as Wi-Fi connection on your device, select your vehicle's SSID address.

HOW TO CONNECT THE WI-FI

1. Please check up the SSID number on the bottom of the vehicle. Move the power switch on the vehicle to "ON" position. The power will illuminate, Wait approximately 60 seconds and the signal light will start to blink slowly.
2. On your iOS, Android and PC system device, go to settings and trun on the Wi-Fi. The SSID address of your vehicle will appears as an available connection.
3. Select the vehicle to confirm the connection. Ensure there is a check mark to the left of the SSID address and the Wi-Fi connection logo appears at the top of your device's screen.
4. Exit out of setting and open the "Cloud Rover™".
   1. Turn the vehcile power switch on "OFF" or "ON" Position.
   2. The tail light will be red flashing when charging.
   3. When the charging completely finished, All the tail flash light will be light up in red.

   Remark: The Charging time will be shorted in half when the power switch is on "OFF" state.
5. The signal light will blink faster now.
6. When your device screen shows the view from the vehicle's live-stream video camera. Your are ready to start exploring.

Charging And Running Led Indicator

PACK LIST

Go to Official websit www.icloudrover.com
↓
Click, download & install the software Free !
↓
Turn on the Vehicle
↓
Go to setting and turn on smart phone wifi
↓
Select the SSID address of your vehcile
↓
Go to the control interface ⟶ Star your Games !

PACK LIST

Contents:
1 PC x Cloud Rover™ vehicle
1 PC x Antenna
1 PC x AC Charger
1 PC x Instruction Manual

⚠ WARNING:

1. Please Charge the Cloud Rover™ about 2.5 hours before playing. All the tail flash light will be light up in red after full charged.
2. Smart phone power less than 40%, Signal will become weak.